



TR-13

Owner's Manual

MAGNUS®

Travel Tripod

Thank you for choosing Magnus.

The Magnus TR-13 Travel tripod is the perfect lightweight travel companion when you're on the go. This tripod features a dual-action ballhead with pan control for precise aim. An Arca-type quick release plate allows you to quickly and effortlessly mount or swap your cameras. For height adjustment up to 62 inches, the adjustable center column offers smooth and precise positioning, and it's reversible, which enables low-angle or close-to-the-ground shots.

Travel Tripod Components



Opening the Tripod

- 1 Fold the legs down until the angle locks click into place. Make sure all the legs are set to the same angle.
- 2 Open the flip locks, and extend each leg to the desired height. Relock each leg.

Always extend the legs from the top flip-locks first.

To adjust the leg angles, slightly fold each leg down, and press the leg angle lock. Move the leg to the new angle, and release the lock.



Mounting the Quick-Release Plate to the Camera

- 1 Loosen the quick-release locking knob, and remove the quick-release plate from the ballhead.
- 2 Screw the quick-release plate into the camera's tripod socket until snug.

Make sure the mounting screw's D-ring is off to the side of the screw.

- 3 Mount the camera/quick-release plate assembly to the ballhead by placing the grooved edges of the quick-release plate into the matching beveled sides of the ballhead.
- 4 Tighten the quick-release locking knob until the assembly is secure.



Operating the Ballhead

Important! Always support the camera with one hand when loosening the tilt locking knob.

To adjust the tilt, loosen the ball locking knob, and change the position of the camera.



For 90° portrait orientation, loosen the ball locking knob, and place the ballhead into the 90° notch.



For 360° panning, loosen the pan locking knob, and rotate the base of the ballhead. Use the degree scale at the base of the head for precise aiming, and tighten the locking knob until secure.




Adjusting the Center Column

- 1 To raise or lower the center column, loosen the center-column collar by turning it counterclockwise.
- 2 Adjust the center column to the desired height, and tighten the center-column collar until secure.



Reversing the Center Column

- 1 Unscrew the counterweight hook from the bottom of the center column.
- 2 Loosen the center column locking collar, and remove the center column from the tripod.
- 3 Align the channel on the side of the center column with the notch in the center column hole, and insert the bottom of the center column up through the hole.
- 4 Tighten the center column collar, and replace the counterweight hook.

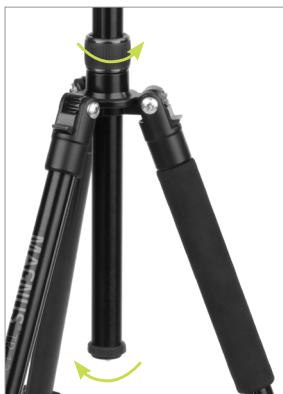

Folding the Tripod

- 1 Retract and lock each leg.
- 2 Set the center column to its maximum height.
- 3 Slightly fold each leg down, and press the leg angle lock tab. Fold each leg up until they're all parallel to the center column.



All images are for illustrative purposes only.

User Cautions

- Please read and follow these instructions, and keep this manual in a safe place.
- Never set up or pull down a tripod while a camera is mounted.
- Do not move the tripod or adjust the legs while a camera is mounted.
- Do not exceed the maximum weight capacity of the tripod.
- Never leave a camera unattended on the tripod.
- The camera should be securely fastened to the quick-release mounting plate before mounting onto the tripod.
- Never mount a camera to the tripod until all tripod legs are locked and stabilized.
- Do not lift or move the tripod by the head.
- Keep hands clear of the inside of the legs, to avoid trapping fingers.
- The safe operation of the tripod is the responsibility of the user.

ONE-YEAR LIMITED WARRANTY

This Magnus product is warranted to the original purchaser to be free from defects in materials and workmanship under normal consumer use for a period of one (1) year from the original purchase date or thirty (30) days after replacement, whichever occurs later. The warranty provider's responsibility with respect to this limited warranty shall be limited solely to repair or replacement, at the provider's discretion, of any product that fails during normal use of this product in its intended manner and in its intended environment. Inoperability of the product or part(s) shall be determined by the warranty provider. If the product has been discontinued, the warranty provider reserves the right to replace it with a model of equivalent quality and function.

This warranty does not cover damage or defect caused by misuse, neglect, accident, alteration, abuse, improper installation or maintenance. EXCEPT AS PROVIDED HEREIN, THE WARRANTY PROVIDER MAKES NEITHER ANY EXPRESS WARRANTIES NOR ANY IMPLIED WARRANTIES, INCLUDING BUT NOT LIMITED TO ANY IMPLIED WARRANTY OF MERCHANTABILITY OR FITNESS FOR A PARTICULAR PURPOSE. This warranty provides you with specific legal rights, and you may also have additional rights that vary from state to state.

To obtain warranty coverage, contact the Magnus Customer Service Department to obtain a return merchandise authorization ("RMA") number, and return the defective product to Magnus along with the RMA number and proof of purchase. Shipment of the defective product is at the purchaser's own risk and expense.

For more information or to arrange service, visit www.magnustripods.com or call Customer Service at 212-594-2353.